

Operating Instructions

This appliance is intended for household use only.

This appliance may have a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature. **For U.S. residents only:** In the event of an unusual circumstance such as immersion, the protective device will not allow the dryer to operate. Periodically check the safety plug to verify it is in proper working order. Plug the appliance into an electrical outlet and press the test button. The dryer should stop immediately. To resume operation, press the reset button.

IONIC TECHNOLOGY®

Ionic hair dryers dry your hair faster. Negative ions reduce the size of water droplets on your hair, allowing more water to be absorbed. This helps condition, soften, and make your hair shinier while adding volume. To activate the ionic feature, slide the ionic switch to the ON position. To turn hair-conditioning ions off, slide switch to the OFF position.

HELPFUL STYLING HINTS

- **DO NOT** concentrate airflow on any one area for an extended period of time.
- To change attachments, wait for the attachments to cool after using them. Never remove them from the appliance when hot.
- If you want to dry your hair quickly, remove the attachments and set the dryer at the highest heat and speed setting.
- When drying is complete, wait for the appliance to cool before storing. **DO NOT** wrap the cord

around the dryer. Use the practical hanging ring. This keeps the cord from tangling and wearing prematurely.

Automatic Worldwide Dual Voltage

This appliance will automatically adjust to the proper voltage. In North America, connect the plug into any outlet. Outside North America, use a plug adapter attachment of the proper configuration for the appropriate power outlet.

(USA) **1875W IONIC® DRYER**



The appearance of your appliance may vary from the illustrations above.

**GET
THE
LOOK!**

1. PREP

Get your hair ready for hardcore style and massive texture! Towel-dry your hair to remove excess water. Set your BED HEAD® Power Trip™ IONIC® DRYER to the highest speed and heat setting until hair is almost completely dry then apply your Power Trip™ hair gel throughout hair.

2. STYLE

Lower heat and speed setting and begin to style hair as desired. For straightening and smoothing all hair types, use the smoothing comb attachment. To detangle and add texture to the hair use the detangling comb attachment. The brush attachment shapes and styles while drying. Roll hair once around the brush, rotating the brush and pulling the hair downwards to create flips.

3. FINISH

Once your desired style is achieved press the cold shot button to set the style and apply additional gel at the tips if desired.

BED HEAD®
TIGI®
Power Trip™

BH408



**MASSIVE TEXTURE
HARD CORE
STYLE**



**GET
THE
LOOK!**

*Bed Head® Power Trip™ Hair Gel sold only in professional salons

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. Always “unplug it” immediately after using.
2. **DO NOT** use while bathing.
3. **DO NOT** place or store appliance where it can fall or be pulled into a tub or sink.
4. **DO NOT** use near, place in or drop into water or other liquid.
5. If an appliance falls into water, “unplug it” immediately. **DO NOT** reach into the water.
6. **DO NOT** use an appliance whose cord has become twisted, bent or otherwise damaged.

WARNING: To reduce the risk of burns, fire, electrocution, or injury to persons:

1. An appliance should never be left unattended when plugged in. Turn off the switch and unplug the electrical cord when not in use.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.

3. Use this appliance only for its intended use as described in this manual. **DO NOT** use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped into water. Return the appliance to a service center for examination and repair.

NOTE: Helen of Troy L.P. does not have an authorized service center. However, if this appliance is still under warranty, return it to the Helen of Troy Consumer Service Department for replacement.

5. Keep the cord away from heated surfaces. **DO NOT** pull, twist or wrap the cord around the appliance.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening.
9. **DO NOT** use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. **DO NOT** use an extension cord with this appliance.
11. **DO NOT** direct hot air toward eyes or other heat sensitive areas.
12. Attachments (when furnished) may be hot during use. Allow them to cool before handling.
13. **DO NOT** place appliance on any surface while it is operating.
14. While using the appliance, keep your hair away from the air inlets.
15. **DO NOT** operate with a voltage converter.

SAVE THESE INSTRUCTIONS

Maintenance

Your appliance is virtually maintenance free. No lubrication is needed. Keep heated surfaces clean and free of dust, dirt, and hair spray. If cleaning becomes necessary, unplug the appliance from the power source and wipe the exterior with a damp cloth. If the cord becomes twisted, untwist prior to use. **WARNING: If any malfunction occurs, do not attempt to repair. This appliance has no user-serviceable parts.**

STORAGE

When not in use, “unplug it.”

Allow appliance to cool and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. Handle cord carefully for longer life and avoid jerking, bending sharply, twisting, or straining cord, especially at plug connections.

Limited 36-Month Warranty

This appliance is warranted against defects in material or workmanship for 36 months from the date of purchase. Any problems arising from misuse, attempts at repair, dropping or extreme wear are not covered by this warranty. The store where the item was purchased is authorized to make an exchange only if the return is made within 30 days from purchase date. For exchanges after 30 days, send the appliance postage paid along with proof of purchase, a note explaining reason for return, and \$6.00 US to cover handling, insurance, and return postage costs to: Helen of Troy L.P., Consumer Service Department, 1 Helen of Troy Plaza, El Paso, Texas 79912 USA. **(In US Only:** California residents are not required to send \$6.00 US.) Toll-free number 1-800-487-7273.

This warranty gives you specific legal rights, and you may also have other rights, which may vary depending on where you live.

BED HEAD[®]

TIGI

www.tigihaircare.com

Made in China
Distributed by Helen of Troy L.P.
El Paso, TX 79912 USA
www.HelenofTroyUSA.com

IONIC TECHNOLOGY[®] and IONIC[®] are trademarks of Helen Of Troy Limited

Bed Head[®] and TIGI[®] are registered trademarks of Unilever PLC or its affiliates and are used by Helen of Troy Limited under license.

For product information, visit us at www.bedheadstyling.com

©2010 All rights reserved. (BH-564)(USA) Printed in China